

RF Wireless Remote Control Kit (Model 0020752 4S2PXB-DC12+1CV-8)

The receiver is designed for one-transmitter-many-receivers system. Use an 8 buttons transmitter to control 4 receivers

Package Include:

4 x Receiver: S2PXB-DC06 / S2PXB-DC09 / S2PXB-DC12 / S2PXB-DC24
1 x Transmitter: CV-8
1 x User manual

Feature:

Application: It can be used in industry automation, agriculture automation and home automation, such as factory, house, farm, pasture, vehicle, ship, offshore operation, aerial vehicle, field call, etc. It can remote control equipments on land, water and air, such as remote control lights, sirens, locks, motors, fans, winches, blinds, linear actuators, doors, windows, electric solenoid valves, security alarm, business signs and various devices.
Wireless control, easy to install.

Waterproof: The receiver has waterproof case and waterproof connector, it can be installed outdoors.

DC Power Output: It can control DC equipment with voltage DC 6V / 9V / 12V / 24V.

High Power: Each channel can work at maximum current 30A, such as 360W/12V, 180W/6V, 270W/9V, 720W/24V.

With wired control terminals: You can connect sensors, limit switches, manual switches or external devices to control the receiver.

You can turn on/ off the receiver with transmitter (remote control) from any place within a reliable distance.

Wireless RF signal can pass through walls, floors, doors or windows.

With reverse power protection and over current protection.

Reliable control: The receiver only works with the transmitter which use same code.

One/several transmitters can control one/several receivers simultaneously.

You can use two or more units in the same place.

Receiver Parameters:

Model No.: S2PXB-DC06 / S2PXB-DC09 / S2PXB-DC12 / S2PXB-DC24

Power Supply (Operating Voltage): DC6V (S2PXB-DC06), DC9V±1V (S2PXB-DC09), DC12V±1V (S2PXB-DC12), DC24V±2V (S2PXB-DC24)

Output: DC6V (S2PXB-DC06), DC9V (S2PXB-DC09), DC12V (S2PXB-DC12), DC24V (S2PXB-DC24)

Working Frequency: 315MHz / 433MHz

Channel: 2 CH

Control Modes: Toggle, Momentary, Latched, Momentary + Toggle

Static Current: ≤6mA

Maximum Working Current: 30A / each channel

PCB size: 140mm x 73mm x 18mm

Case size: 192mm x 100mm x 45mm

Work with Fixed code transmitters.

Transmitter:

Model No.: CV-8

Channel/Button: 8

Button Symbol: 1, 2, 3, 4, 5, 6, 7, 8

Operating Voltage: 12V (1 x 23A -12V battery, can be used for 12 months)

Operating Current: 15mA

Operating Frequency: 315 Mhz/ 433Mhz

Encoding Chip: PT2262/PT2264/SC2262

Encoding Type: Fixed code by soldering, up to 6561 codes

Transmitting Distance: 500m / 1500ft (theoretically)

Modulation Mode: ASK

Operating Temperature: -20 ° C to +70 ° C

Unit Size: 110mm x 50mm x 18mm

Matching Transmitters:

The receiver can work with different transmitters, such as model CV-8 (500M), or CB-8 (1000M) etc.

Working Range:

With a transmitter (such as CV-8) to form a complete set, the maximum working distance can reach 500M in an open ground.

The maximum working distance is a theoretical data, it shall be operated in an open ground, no barriers, no any interference. But in the practice, it will be hindered by trees, walls or other constructions, and will be interfered by other wireless signals. Therefore, the actual distance may not reach this maximum working distance.

If you want to have a further working range, you can install an external antenna to the receiver, and you also can use a powerful transmitter, such as CB series transmitters.

Usage:

The receiver can be used to control DC 6V / 9V / 12V / 24V equipments. If the power supply of those equipments is DC 12V, you should choose the receiver with same DC 12V version; and if the power supply of those equipments is DC 24V, you should choose the receiver with same DC 24V version.

Wiring:

If you want to control a DC 12V lamp, do as following:

- 1) Connect the positive pole of DC power supply to terminal "L / +", and connect the negative pole of DC power supply to terminal "N / -".
- 2) Connect the positive pole of lamp to terminal "A (+)" of OUTPUT, and connect the negative pole of lamp to terminal "B (-)" of OUTPUT.

Setting different control modes:

We have set the receiver as Toggle control mode before delivery. If you want to use other control modes, do as following operation:

Setting control mode Toggle: Only connect Jumper-2.

Control mode Toggle (with transmitter CV-8): Press -> On; Press again -> Off.

Press button 1: Terminal A and B of OUT1 of Receiver 1 output DC power, the lamp 1 is on.

Press button 1 again: Terminal A and B of OUT1 of Receiver 1 stop outputting, the lamp 1 is off.

Press button 2: Terminal A and B of OUT2 of Receiver 1 output DC power, the lamp 2 is on.

Press button 2 again: Terminal A and B of OUT2 of Receiver 1 stop outputting, the lamp 2 is off.

...

Press button 7: Terminal A and B of OUT1 of Receiver 4 output DC power, the lamp 7 is on.

Press button 7 again: Terminal A and B of OUT1 of Receiver 4 stop outputting, the lamp 7 is off.

Press button 8: Terminal A and B of OUT2 of Receiver 4 output DC power, the lamp 8 is on.

Press button 8 again: Terminal A and B of OUT2 of Receiver 4 stop outputting, the lamp 8 is off.

Setting control mode Momentary: Only connect Jumper-1.

Control mode Momentary (with transmitter CV-8): Press and hold -> On; Release -> Off.

Press and hold button 1: Terminal A and B of OUT1 of Receiver 1 output DC power, the lamp 1 is on.

Release button 1: Terminal A and B of OUT1 of Receiver 1 stop outputting, the lamp 1 is off.

Press and hold button 2: Terminal A and B of OUT2 of Receiver 1 output DC power, the lamp 2 is on.

Release button 2: Terminal A and B of OUT2 of Receiver 1 stop outputting, the lamp 2 is off.

...

Press and hold button 7: Terminal A and B of OUT1 of Receiver 4 output DC power, the lamp 7 is on.

Release button 7: Terminal A and B of OUT1 of Receiver 4 stop outputting, the lamp 7 is off.

Press and hold button 8: Terminal A and B of OUT2 of Receiver 4 output DC power, the lamp 8 is on.

Release button 8: Terminal A and B of OUT2 of Receiver 4 stop outputting, the lamp 8 is off.

Setting control mode Latched: Do not connect Jumper-1 and Jumper-2.

Control mode Latched (with transmitter CV-8): Press -> On, other relays Off; Press another button -> Off.

Press button 1: Terminal A and B of OUT1 of Receiver 1 output DC power, the lamp 1 is on.

Terminal A and B of OUT2 of Receiver 1 stop outputting, the lamp 2 is off.

Press button 2: Terminal A and B of OUT2 of Receiver 1 output DC power, the lamp 2 is on.

Terminal A and B of OUT1 of Receiver 1 stop outputting, the lamp 1 is off.

...

Press button 7: Terminal A and B of OUT1 of Receiver 4 output DC power, the lamp 7 is on.

Terminal A and B of OUT2 of Receiver 4 stop outputting, the lamp 8 is off.

Press button 8: Terminal A and B of OUT2 of Receiver 4 output DC power, the lamp 8 is on.

Terminal A and B of OUT1 of Receiver 4 stop outputting, the lamp 7 is off.

Setting control mode Momentary +Toggle (with transmitter CV-8): connect Jumper-1& Jumper-2

1) Control mode Momentary (Channel 1 of Receiver 1, 2, 3, 4): Press and hold -> On; Release -> Off.

Press and hold button 1: Terminal A and B of OUT1 of Receiver 1 output DC power, the lamp 1 is on.

Release button 1: Terminal A and B of OUT1 of Receiver 1 stop outputting, the lamp 1 is off.

...

Press and hold button 7: Terminal A and B of OUT1 of Receiver 4 output DC power, the lamp 7 is on.

Release button 7: Terminal A and B of OUT1 of Receiver 4 stop outputting, the lamp 7 is off.

2) Control mode Toggle (Channel 2 of Receiver 1, 2, 3, 4): Press -> On; Press again -> Off.

Press button 2: Terminal A and B of OUT2 of Receiver 1 output DC power, the lamp 2 is on.

Press button 2 again: Terminal A and B of OUT2 of Receiver 1 stop outputting, the lamp 2 is off.

...

Press button 8: Terminal A and B of OUT2 of Receiver 4 output DC power, the lamp 8 is on.

Press button 8 again: Terminal A and B of OUT2 of Receiver 4 stop outputting, the lamp 8 is off.

Wired control terminals:

The receiver has manual control terminals, you can connect external devices, sensors, or manual switches to control the receiver.

1) Signal input:

You can connect external devices (with low level output signal) to manual terminals 1 (Signal +), terminal 2 (Signal +) and terminal 3 (Signal -), then the external device's output signal can control the receiver.

When the external device outputs low level signal to terminal 1 and 3, Terminal A and B of OUT1 output DC power, the lamp 1 is on.

And when disconnect terminals 1 and 3, Terminal A and B of OUT1 stop outputting, the lamp 1 is off.

When the external device outputs low level signal to terminal 2 and 3, Terminal A and B of OUT2 output DC power, the lamp 2 is on.

And when disconnect terminals 2 and 3, Terminal A and B of OUT2 stop outputting, the lamp 2 is off.

2) The manual switches:

You can connect manual switches to manual terminals 1, 2 and 3, then you can use manual switches to control the receiver.

When connect terminals 1 and 3, Terminal A and B of OUT1 output DC power, the lamp 1 is on.

And when disconnect terminals 1 and 3, Terminal A and B of OUT1 stop outputting, the lamp 1 is off.

When connect terminals 2 and 3, Terminal A and B of OUT2 output DC power, the lamp 2 is on.

And when disconnect terminals 2 and 3, Terminal A and B of OUT2 stop outputting, the lamp 2 is off.

How to pair the transmitter to the receiver:

- 1) Press the learning button of receiver for 1- 2 seconds; signal LED on the receiver is on. The receiver enters into status of LEARNING.
- 2) Press any one singular number on transmitter. If signal LED flashes quickly 15 times and turns off, it means learning is successful.
- 3) When receiver is in the status of LEARNING, press again the learning button, signal LED turns off, learning process will be discontinued.
- 4) The receiver can learn several remote controls with different codes.

Delete all transmitters:

We have learned remote control to the receiver. If you don't want the receiver to work with the remote control, you can delete all codes of remote controls, which are stored in the receiver.

Operation: Press and hold the learning button of receiver until signal LED flashes slowly; release the button, LED keeps slow flash. That means all stored codes have been deleted successfully.

Control DC Lamp

