

RF Wireless Receiver (Model 0020082 S15C-DC-ANT3)

Feature:

Application: It can be used in industry automation, agriculture automation and home automation, such as factory, house, farm, pasture, vehicle, ship, offshore operation, aerial vehicle, field call, etc. It can remote control equipments on land, water and air, such as remote control lights, sirens, locks, motors, fans, winches, blinds, linear actuators, doors, windows, electric solenoid valves, security alarm, business signs and various devices.

Wireless control, easy to install.

Power Supply: Two working voltage versions, DC12V, 24V.

Relay Output: This receiver is dry relay output, it can be used to operate both DC and AC equipments. The output terminals are NO / NC (normally open / normally closed), which serves as a switch. That means you should also connect a separate power supply to equipments.

Each channel can work at maximum current 10A.

With external telescopic antenna, the receiver have a farther working range.

You can control the equipments by using the receiver with transmitter (remote control) from any place within a reliable distance.

Wireless RF signal can pass through walls, floors, doors or windows.

With characteristics of reverse power protection and over current protection.

Reliable control: The code has thousands of different combinations, and the receiver only works with the transmitter which use the same code.

One/several transmitters can control one/several receivers simultaneously.

You can use two or more units in the same place.

Receiver Parameters:

Model No.: S15C-DC12-ANT3 / S15C-DC24-ANT3

Power Supply (Operating Voltage): DC12V±1V (S15C-DC12-ANT3), DC24V±2V (S15C-DC24-ANT3)

Output: Relay output (Normally open and normally closed)

Working Voltage Range of Relay: AC110~240V or DC0~28V

Wire range for the terminals: 22-14 AWG

Working Frequency: 433.92MHz

Channel: 15 CH

Control Modes: Self-locking, Momentary, Interlocking, Mixed modes

Static Current: ≤6mA

Maximum Working Current: 10A / each channel

Operating Temperature: -20 ° C to +70 ° C

PCB size: 135mm x 92mm x 19mm

Case Size: 153mm x 120mm x 42mm

Matching Transmitters:

The receiver can work with different transmitters, such as model CV-15 (500M), C-1 (100M), or CB-1 (1000M) etc.

Note 1: If you use the transmitter CV-15 to work with this receiver, because the transmitter CV-15 has total 15 buttons, so that each button will trigger a channel of this receiver.

Note 2: If you use the transmitters C-1 or CB-1 to work with this receiver, because these transmitters have only a button, so that each transmitter will trigger a channel of this receiver.

Working Range:

With a transmitter (such as CV-15) to form a complete set, the maximum working distance can reach 500M in an open ground.

The maximum working distance is a theoretical data, it shall be operated in an open ground, no barriers, no any interference. But in the practice, it will be hindered by trees, walls or other constructions, and will be interfered by other wireless signals. Therefore, the actual distance may not reach this maximum working distance.

Usage (with the transmitter CV-15):

The receiver can be used to control both DC 0~28V and AC 110~240V equipments.

Notice: The receiver is relay output, not DC/AC power output. Initial state of relay output terminals: Terminals A and B are Normally Open; Terminals B and C are Normally Closed.

Wiring:

If you want to control a DC 12V lamp, do as following:

- 1) Connect the positive pole of DC power supply to terminal "+" of INPUT, and connect the negative pole of DC power supply to terminal "-" of INPUT.
- 2) Connect terminal A to the positive pole of DC power supply, connect terminal B to the positive pole of DC lamp, and connect the negative pole of DC lamp to the negative pole of DC power supply.

If you want to control an AC 120V or AC 220V lamp, do as following:

- 1) Connect the positive pole of DC power supply to terminal "+" of INPUT, and connect the negative pole of DC power supply to terminal "-" of INPUT.
- 2) Connect terminal A to the live wire of AC power supply, connect terminal B to one side of AC lamp, and connect another side of AC lamp to the neutral wire of AC power supply.

Setting different control modes:

We have set the receiver as Self-locking control mode before delivery. If you want to use other control modes, do as following operation:

- 1) Setting Momentary mode: When the receiver is in the learning status, press button 1 of the transmitter.

Mode Momentary (Channel 1~16): Press and hold -> On; Release -> Off.

Press and hold button 1 of the transmitter: The relay 1 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 1 is turned on.

Release button 1: The relay 1 is deactivated (disconnect the terminals A and B, connect the terminals B and C), and the lamp 1 is turned off.
Press and hold button 2 of the transmitter: The relay 2 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 2 is turned on.
Release button 2: The relay 2 is deactivated (disconnect the terminals A and B, connect the terminals B and C), and the lamp 2 is turned off.
.....
Press and hold button 15 of the transmitter: The relay 15 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 15 is turned on.
Release button 15: The relay 15 is deactivated (disconnect the terminals A and B, connect the terminals B and C), and the lamp 15 is turned off.

2) Setting Interlocking mode: When the receiver is in the learning status, press button 2 of the transmitter.

Mode Interlocking (Channel 1~16): Press -> On, other relays Off; Press other button -> Off.

Press button 1: The relay 1 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 1 is turned on. Other 14 relays are deactivated (disconnect the terminals A and B, connect the terminals B and C), and other 14 lamps are turned off.

Press button 2: The relay 2 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 2 is turned on. Other 14 relays are deactivated (disconnect the terminals A and B, connect the terminals B and C), and other 14 lamps are turned off.

.....
Press button 15: The relay 15 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 15 is turned on. Other 14 relays are deactivated (disconnect the terminals A and B, connect the terminals B and C), and other 14 lamps are turned off.

3) Setting Self-locking mode: When the receiver is in the learning status, press button 3 of the transmitter.

Mode Self-locking (Channel 1~16): Press -> On; Press again -> Off.

Press button 1 of the transmitter: The relay 1 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 1 is turned on.

Press button 1 again: The relay 1 is deactivated (disconnect the terminals A and B, connect the terminals B and C), and the lamp 1 is turned off.

Press button 2 of the transmitter: The relay 2 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 2 is turned on.

Press button 2 again: The relay 2 is deactivated (disconnect the terminals A and B, connect the terminals B and C), and the lamp 2 is turned off.

.....
Press button 15 of the transmitter: The relay 15 is activated (connect the terminals A and B, disconnect the terminals B and C), and the lamp 15 is turned on.

Press button 15 again: The relay 15 is deactivated (disconnect the terminals A and B, connect the terminals B and C), and the lamp 15 is turned off.

4) Setting Momentary (Channel 1~8) + Interlocking (Channel 9~15) mode: When the receiver is in the learning status, press button 4 of the transmitter.

5) Setting Self-locking (Channel 1~8) + Momentary (Channel 9~15) mode: When the receiver is in the learning status, press button 5 of the transmitter.

6) Setting Interlocking (Channel 1~8) + Self-locking (Channel 9~15) mode: When the receiver is in the learning status, press button 6 of the transmitter.

7) Setting Momentary (Channel 1~13) + Interlocking (Channel 14~15) mode: When the receiver is in the learning status, press button 7 of the transmitter.

8) Setting Self-locking (Channel 1~13) + Momentary (Channel 14~15) mode: When the receiver is in the learning status, press button 8 of the transmitter.

9) Setting Self-locking (Channel 1~5) + Momentary (Channel 6~10) + Interlocking (Channel 11~15) mode: When the receiver is in the learning status, press button 9 of the transmitter.

10) Setting Momentary (Channel 1~5) + Interlocking (Channel 6~10) + Momentary (Channel 11~15) mode: When the receiver is in the learning status, press button 10 of the transmitter.

11) Setting Self-locking (Channel 1~2) + Momentary (Channel 3~10) + Interlocking (Channel 11~15) mode: When the receiver is in the learning status, press button 11 of the transmitter.

12) Setting Momentary (Channel 1~2) + Self-locking (Channel 3~10) + Interlocking (Channel 11~15) mode: When the receiver is in the learning status, press button 12 of the transmitter.

13) Setting Latched (Channel 1~2) + Momentary (Channel 3~10) + Self-locking (Channel 11~15) mode: When the receiver is in the learning status, press button 13 of the transmitter.

14) Setting Self-locking (Channel 1~2) + Interlocking (Channel 3~9) + Momentary (Channel 10~15) mode: When the receiver is in the learning status, press button 14 of the transmitter.

15) Setting Self-locking (Channel 1~13) + All On / Off (Channel 14/15) mode: When the receiver is in the learning status, press button 15 of the transmitter.

Press button 14: Turn on all 15 relays

Press button 15: Turn off all 15 relays


How to pair the transmitter to the receiver:

- 1) Press the learning button of the receiver, the buzzer sounds one time, it means the receiver enters the learning status.
- 2) Press any one button on transmitter within 1 second, if the buzzer sounds three times, it means learning is successful. If the buzzer sounds about 1 second, it means learning is failed and the receiver will quit the learning status.
- 3) The receiver can learn several transmitters with different codes.
- 4) We have set the receiver as Self-locking control mode before delivery. If you want to set other control modes, please delete all codes stored in the receiver before you set other control modes.

Delete all transmitters:


We have learned transmitter to the receiver. If you don't want the receiver to work with the transmitter, you can delete all codes of transmitter, which are stored in the receiver.

Operation: Press and hold the learning button of receiver for 3 seconds until the siren sounds 5 times, then release the button. That means all stored codes have been deleted successfully.

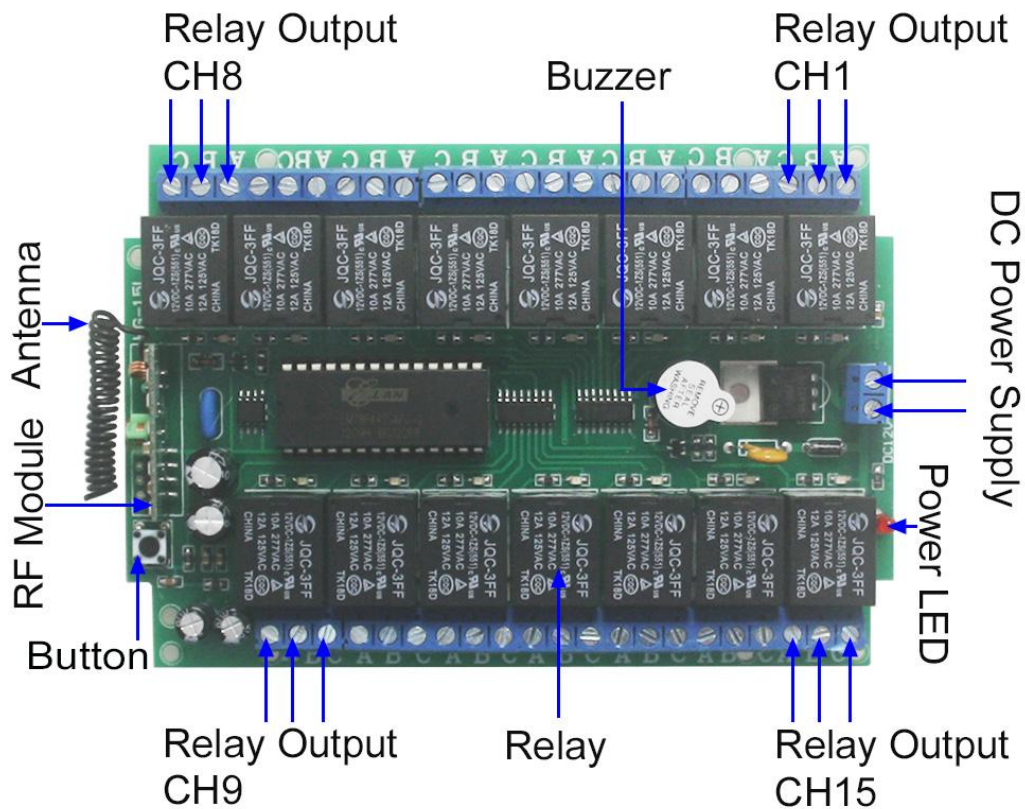


A, B=Normally Open; B, C=Normally Closed.

Control DC Equipment

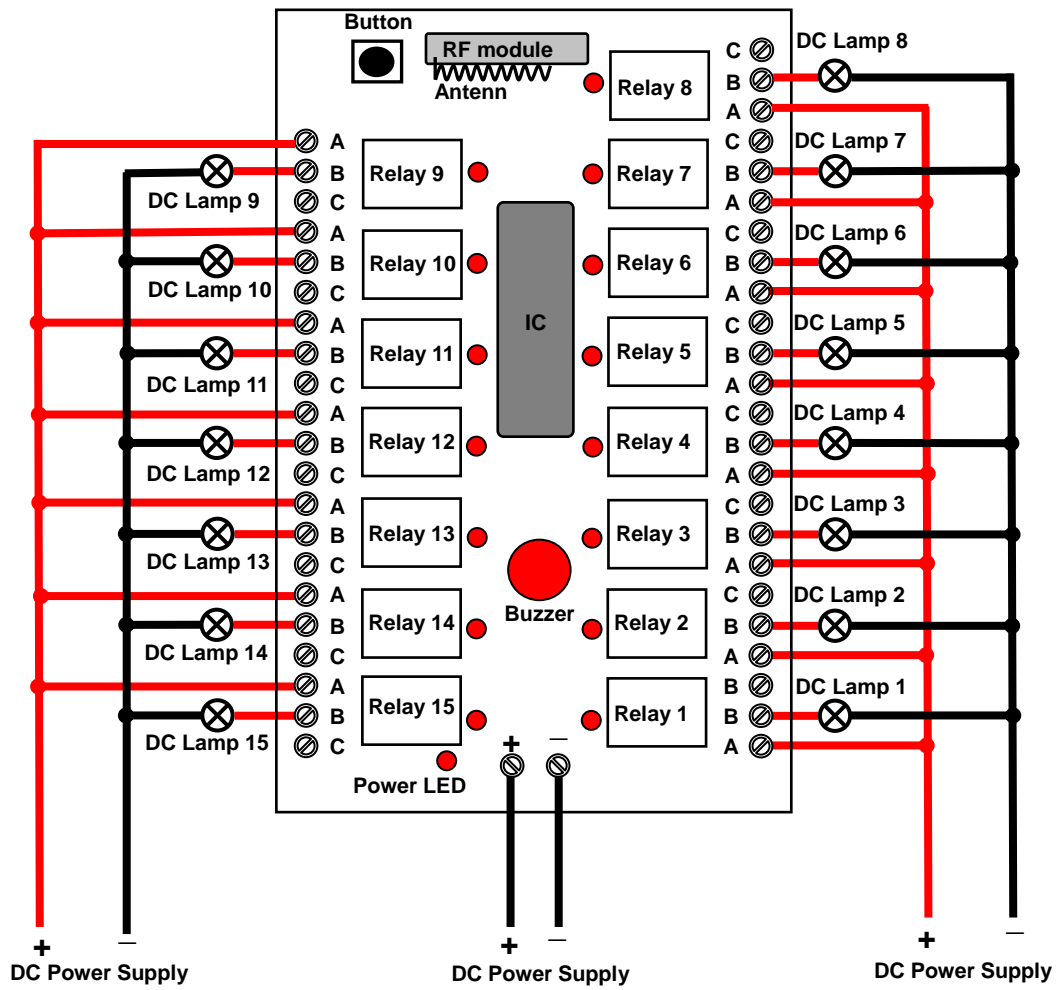

A, B=Normally Open; B, C=Normally Closed.

Control AC Equipment

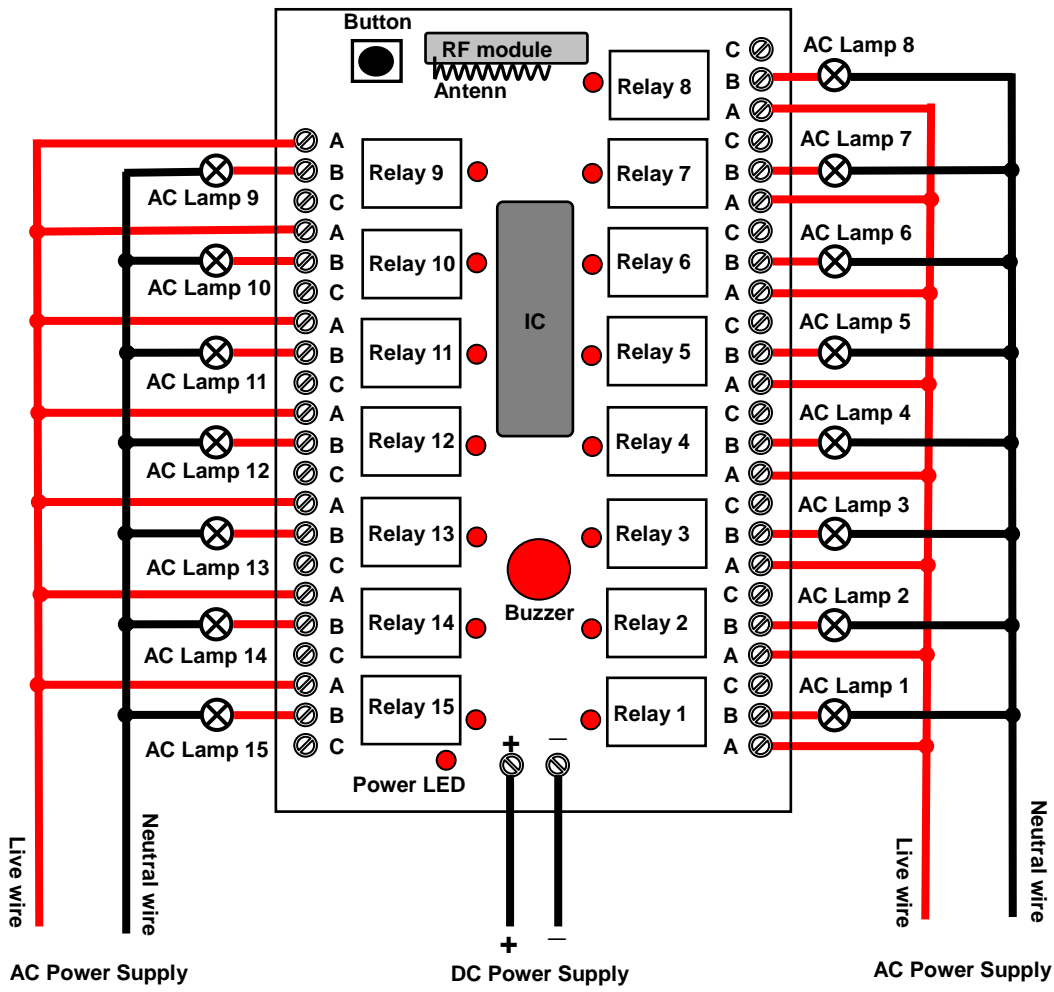

A, B=Normally Open; B, C=Normally Closed.